

Field-replaceable units

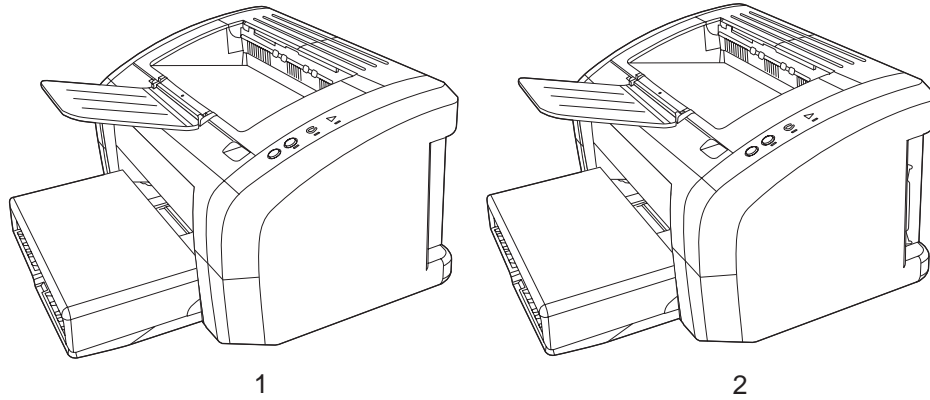


Figure 7-1.

All Models

Ref	Description	Part number	Qty
1	Exchange-LJ1010-110V Printer	Q2460-69001	
1	Exchange-LJ1010-220V Printer	Q2460-69002	
1	Exchange-LJ1012-110V Printer	Q2461-69001	
1	Exchange-LJ1012-220V Printer	Q2461-69002	
2	Exchange-LJ1015-110V Printer	Q2462-69001	
2	Exchange-LJ1015-220V Printer	Q2462-69002	
2	Exchange-LJ1010-220V 3 Year Warranty	Q2463-69001	

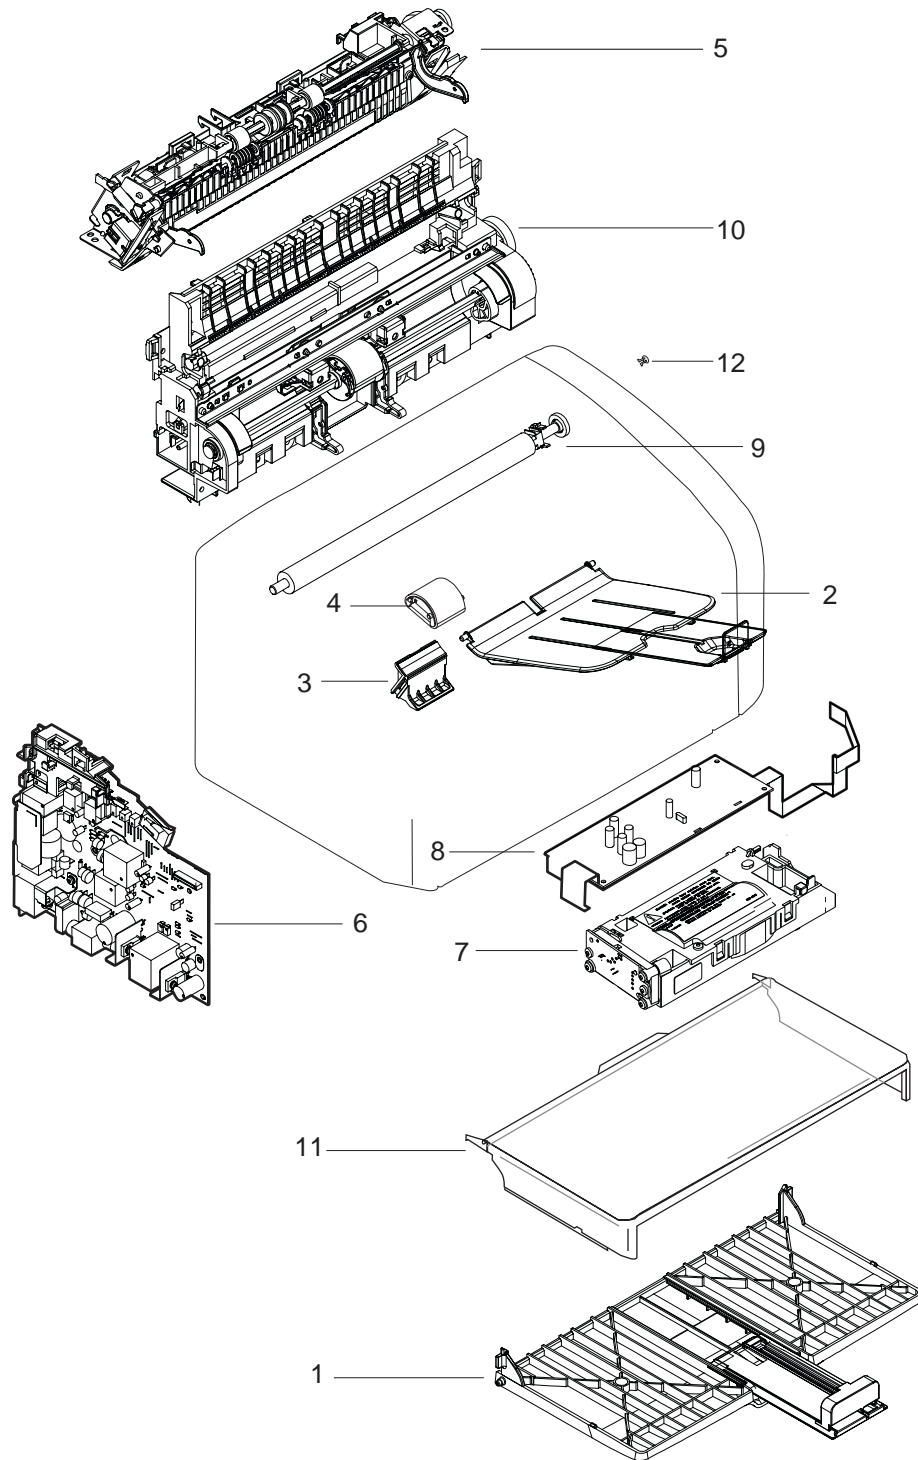


Figure 7-2. Exploded View: Field Replaceable Units

Table 7-3. Replaceable Assemblies

Ref	Description	Part number	Qty
1	PAPER PICKUP TRAY ASS'Y	RM1-0629-000	1
2	DELIVERY TRAY ASS'Y	RM1-0659-000	1

Ref	Description	Part number	Qty
3	SEPARATION PAD ASS'Y	RM1-0648-000	1
4	ROLLER, PICKUP	RL1-0266-000	1
5	FUSER (FIXING ASS'Y) 110-127V	RM1-0650-000	1
5	FUSER (FIXING ASS'Y) 220-240V	RM1-0656-000	1
6	ENGINE POWER ASS'Y 110-127V	RM1-0807-000	1
6	ENGINE POWER ASS'Y 220-240V	RM1-0808-000	1
7	LASER SCANNER ASS'Y	RM1-0171-000	1
8	ENGINE CONTROL ASS'Y	RM1-0806-000	1
9	TRANSFER ROLLER ASS'Y	RM1-0658-000	1
10	PAPER PICKUP ASS'Y	RM1-0641-000	1
11	Dust Cover-US	Q2460-67914	1
11	Dust Cover-Worldwide	Q2460-67915	1
12	Door Link Clip (Stopper)	RC1-1957-000	1
N/A	CD Rom-West Europe/America	Q2460-60101	1
N/A	CD Rom-North Europe	Q2460-60102	1
N/A	CD Rom-East Europe	Q2460-60103	1
N/A	CD Rom-Asia	Q2460-60104	1
N/A	CD Rom-China	Q2460-60105	1
N/A	CD-Service and Support Training	Q2460-60106	1
N/A	Service Manual	Q2460-90928	1

Alphabetical parts list

Table 7-4. Alphabetical parts list

Description	Part number	Table and page
CD Rom-Asia	Q2460-60104	Table 7-3 on page 113
CD Rom-China	Q2460-60105	Table 7-3 on page 113
CD Rom-East Europe	Q2460-60103	Table 7-3 on page 113
CD Rom-North Europe	Q2460-60102	Table 7-3 on page 113
CD Rom-West Europe/America	Q2460-60101	Table 7-3 on page 113
CD-Service and Support Training	Q2460-60106	Table 7-3 on page 113
DELIVERY TRAY ASS'Y	RM1-0659-000	Table 7-3 on page 112
Door Link Clip (Stopper)	RC1-1957-000	Table 7-3 on page 113
Dust Cover-US	Q2460-67914	Table 7-3 on page 113
Dust Cover-Worldwide	Q2460-67915	Table 7-3 on page 113
ENGINE CONTROL ASS'Y	RM1-0806-000	Table 7-3 on page 113
ENGINE POWER ASS'Y 110-127V	RM1-0807-000	Table 7-3 on page 113
ENGINE POWER ASS'Y 220-240V	RM1-0808-000	Table 7-3 on page 113
Exchange-LJ1010-110V Printer	Q2460-69001	Table 7-2 on page 111
Exchange-LJ1010-220V 3 Year Warranty	Q2463-69001	Table 7-2 on page 111
Exchange-LJ1010-220V Printer	Q2460-69002	Table 7-2 on page 111
Exchange-LJ1012-110V Printer	Q2461-69001	Table 7-2 on page 111
Exchange-LJ1012-220V Printer	Q2461-69002	Table 7-2 on page 111
Exchange-LJ1015-110V Printer	Q2462-69001	Table 7-2 on page 111
Exchange-LJ1015-220V Printer	Q2462-69002	Table 7-2 on page 111
FUSER (FIXING ASS'Y) 110-127V	RM1-0650-000	Table 7-3 on page 113
FUSER (FIXING ASS'Y) 220-240V	RM1-0656-000	Table 7-3 on page 113
LASER SCANNER ASS'Y	RM1-0171-000	Table 7-3 on page 113
PAPER PICKUP ASS'Y	RM1-0641-000	Table 7-3 on page 113
PAPER PICKUP TRAY ASS'Y	RM1-0629-000	Table 7-3 on page 112
ROLLER, PICKUP	RL1-0266-000	Table 7-3 on page 113
SEPARATION PAD ASS'Y	RM1-0648-000	Table 7-3 on page 113
Service Manual	Q2460-90928	Table 7-3 on page 113
TRANSFER ROLLER ASS'Y	RM1-0658-000	Table 7-3 on page 113

Numerical parts list

Table 7-5. Numerical parts list

Part number	Description	Table and page
Q2462-69002	Exchange-LJ1015-220V Printer	Table 7-2 on page 111
Q2463-69001	Exchange-LJ1010-220V 3 Year Warranty	Table 7-2 on page 111
Q2460-60101	CD Rom-West Europe/America	Table 7-3 on page 113
Q2460-60102	CD Rom-North Europe	Table 7-3 on page 113
Q2460-60103	CD Rom-East Europe	Table 7-3 on page 113
Q2460-60104	CD Rom-Asia	Table 7-3 on page 113
Q2460-60105	CD Rom-China	Table 7-3 on page 113
Q2460-60106	CD-Service and Support Training	Table 7-3 on page 113
Q2460-67914	Dust Cover-US	Table 7-3 on page 113
Q2460-67915	Dust Cover-Worldwide	Table 7-3 on page 113
Q2460-69001	Exchange-LJ1010-110V Printer	Table 7-2 on page 111
Q2460-69002	Exchange-LJ1010-220V Printer	Table 7-2 on page 111
Q2460-90928	Service Manual	Table 7-3 on page 113
Q2461-69001	Exchange-LJ1012-110V Printer	Table 7-2 on page 111
Q2461-69002	Exchange-LJ1012-220V Printer	Table 7-2 on page 111
Q2462-69001	Exchange-LJ1015-110V Printer	Table 7-2 on page 111
RC1-1957-000	Door Link Clip (Stopper)	Table 7-3 on page 113
RL1-0266-000	ROLLER, PICKUP	Table 7-3 on page 113
RM1-0171-000	LASER SCANNER ASS'Y	Table 7-3 on page 113
RM1-0629-000	PAPER PICKUP TRAY ASS'Y	Table 7-3 on page 112
RM1-0641-000	PAPER PICKUP ASS'Y	Table 7-3 on page 113
RM1-0648-000	SEPARATION PAD ASS'Y	Table 7-3 on page 113
RM1-0650-000	FUSER (FIXING ASS'Y) 110-127V	Table 7-3 on page 113
RM1-0656-000	FUSER (FIXING ASS'Y) 220-240V	Table 7-3 on page 113
RM1-0658-000	TRANSFER ROLLER ASS'Y	Table 7-3 on page 113
RM1-0659-000	DELIVERY TRAY ASS'Y	Table 7-3 on page 112
RM1-0806-000	ENGINE CONTROL ASS'Y	Table 7-3 on page 113
RM1-0807-000	ENGINE POWER ASS'Y 110-127V	Table 7-3 on page 113
RM1-0808-000	ENGINE POWER ASS'Y 220-240V	Table 7-3 on page 113